

**FEATURES**

- Easy to Operate
- Pull Cord Activated
- Operates from any Angle
- Positive Call Position
- Ruggedly Constructed
- U. L. Listed Switches

**APPLICATION**

Designed primarily for use in Senior Citizens Housing and private or semi-private rooms in Nursing Homes.

**DESCRIPTION**

Toggle-type station consists of a U.L. listed ivory toggle switch with stainless steel face plate (stamped pull for help), cord guide, 6 ft. white nylon cord and pendant. Station has screws for wire connections (Fig. 1)


Slide switch type station consists of a U.L. listed slide switch with stainless steel face plate (stamped pull for help), cord guide, 6 ft. white nylon cord and pendant. Station has 6" pig tail leads for wire connection (Fig. 2)

**OPERATION**

Activating any EC-1 pull cord station shall energize all call lights and sound all alarm signals in a system as required for Senior Citizens Emergency Call or Nursing Homes.

**DIMENSIONS**

Toggle type — 4 1/2" H x 2 1/2" W x 1" D  
 Slide Switch Type — 4 1/2" H x 2 1/2" W x 1 1/2" D  
 Designed for single gang mounting.

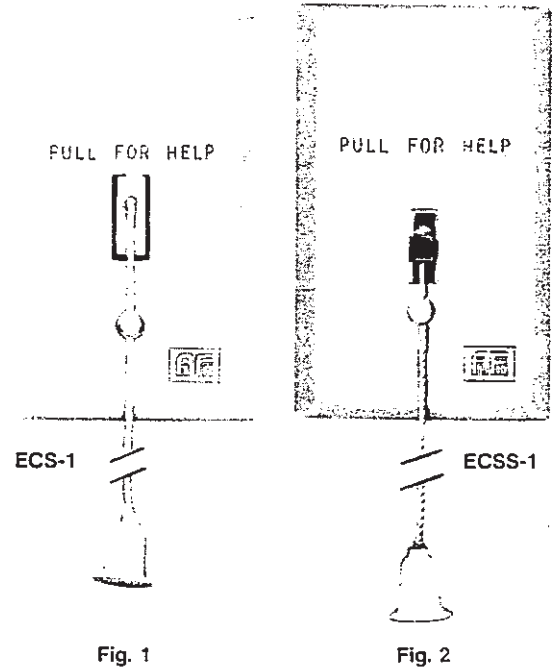

**ORDERING DATA**

Catalog Number	Description	Functions
ECS-1	Single Pull Cord Station — Toggle Type	S.P.S.T.
ECD-1	Single Pull Cord Station — Toggle Type	D.P.S.T.
<del>ECC-1</del>	Single Pull Cord Station — Toggle Type	S.P.D.T.
ECSS-1	Single Pull Cord Station — Slide-Switch Type	D.P.S.T.
Change #1 to #2 for Double Cord Add letter P after number for pilot light		
Single Gang Mounting      Install with toggle up - contacts open		